

RIDGEMONT PENDANT - CORD HUNG

HW KIT # 94-A239BC

PARTS LIST

- A. 5/8" Cap Nut with hole (1)
- B. Threaded Pipe (1)
- C. 5" Canopy (1)
- D. Cross bar (1)
- E. Wire Connectors (3)
- F. 1" or 1½" Screws (2)

- Black Fixture Cord
- Glass and White Die Cast Ring

 
CORD HUNG INSTALLATION

1. Determine the desired height of the pendant from the ceiling, add approximately 12" and cut any excess cord length.
2. Thread the flat side of the Cap Nut (A) onto the 1½" Threaded Pipe (B) and tighten.
3. Feed the cord through each of the following parts in the order listed:
 - Cap Nut (A) and threaded pipe (B) assembly (from Step 2) - cap toward fixture
 - Canopy (C) - rounded side toward fixture
 - Straight cross bar (D) - green ground screw toward fixture
4. Make a knot in the cord approximately 6" from the end for a strain relief.
5. Carefully remove about 4" the outer jacket from the cord and strip about ¾" off each of the leads (black, white and green wires).
6. Using the Wire Connectors (E), connect the white supply wire to the white fixture wire and connect the black supply wire to black fixture wire. Be sure no bare wires are exposed outside of wire connectors.
7. Using the Wire Connectors (E), connect the green ground wires from the ceiling box to the green ground wire from the fixture.
8. Place the cross bar on the ceiling box and secure with the machine screws (F).
9. Raise the canopy up to the ceiling box with the center mounting hole aligned with the center of the cross bar.
10. Insert Cap Nut/Threaded pipe assembly (from Step 2) through the center hole of the 5" canopy (C) and thread into cross bar until secure.
11. Install the glass by unscrewing the white die cast ring from the socket. Place the glass on the socket and then screw the ring back on to secure the glass.
12. Now electricity can be restored to the fixture.

GENERAL

1. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
2. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.
3. These fixtures are intended to be mounted to a minimum 4" x 1-1/8" deep round outlet box. The box must be directly supported by the building structure.
4. Before starting the installation, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.

NOTE: The important safeguards and instructions appearing in these instructions are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors, which cannot be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.



LIMITED 2-YEAR WARRANTY: Avalanche Ranch Light Company warrants that its products are free of defects in workmanship and materials for a period of two years from date of purchase. If within two years from date of purchase any of its products are found defective in workmanship or materials, Avalanche Ranch Light Company will repair or replace, at its sole option, the defective product upon presentation of proof of purchase and the defective product.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Avalanche Ranch Light Company's liability under any warranty, whether express or implied, is LIMITED SOLELY TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT FOR THE DURATION OF THIS WARRANTY AND DOES NOT INCLUDE LABOR OR OTHER CONSEQUENTIAL OR INCIDENTAL DAMAGES.