


Lighting

PO Box 31397
 BELLINGHAM, WA 98228-3517
 (T) 360-752-1610 • 888-841-1810
 (F) 360-752-1612 • 888-841-1812

PARTS LIST

- 1 1/2" Screw (2)
- Cross bar (1)
- Screw (2)
- Ground
- Connecto
- Nuts (2)

Junc

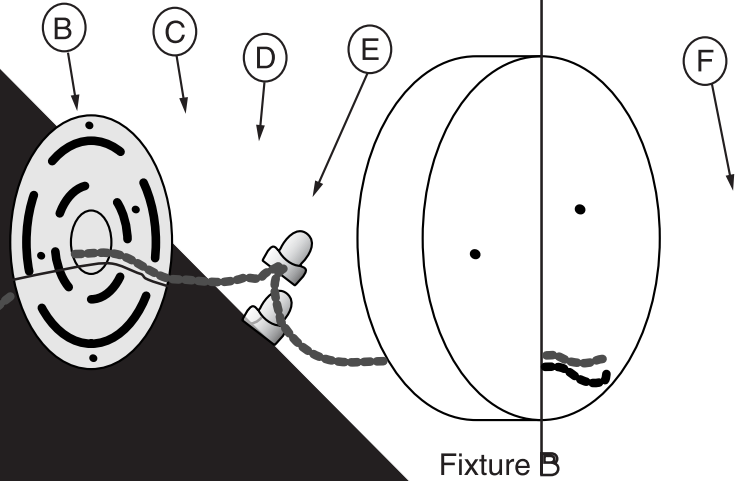

Fixture B

GENERAL

1. To ensure the success of the installation, read these instructions and review the drawings carefully before beginning.
2. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.
3. These fixtures are intended to be mounted to a minimum 1-1/8" deep round outlet box. The box must be directly supported by the building structure.
4. **Before starting the installation, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.**

NOTE: The important safeguards and instructions appearing in these instructions are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors, which cannot be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.

LIMITED 2-YEAR WARRANTY: Avalanche Ranch Light Company warrants that its products are free of defects in workmanship and materials for a period of two years from date of purchase. If within two years from date of purchase any of its products are found defective in workmanship or materials, Avalanche Ranch Light Company will repair or replace, at its sole option, the defective product upon presentation of proof of purchase and the defective product.

INSTALLATION INSTRUCTIONS

5. Insert the cross bar (C) all the way into the two mounting holes on the back of fixture.
6. For those fixtures with a ground wire, use the Wire Connector (D) to connect the ground wire of the fixture to the ground wire in the junction box.
7. Place back of fixture over junction box with wires protruding through mounting holes. Secure with acorn nuts (F) until tight.
8. Electricity may now be restored to the fixture.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Avalanche Ranch Light Company's liability under any warranty, whether express or implied, is LIMITED SOLELY TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT FOR THE DURATION OF THIS WARRANTY AND DOES NOT INCLUDE LABOR OR OTHER CONSEQUENTIAL OR INCIDENTAL DAMAGES.