


**PARTS LIST - SECTION A**

- A. Flat Cross Bar (1)
- B. 1" Screws (2)
- C. 1/2" Threaded Pipe (1)
- D. Fireplate (1)
- E. Lock wash and hex nut (1 of each)
- F. Wire Connectors (3)
- G. Threaded Pipes (2)
- H. Rustic Cap (2)

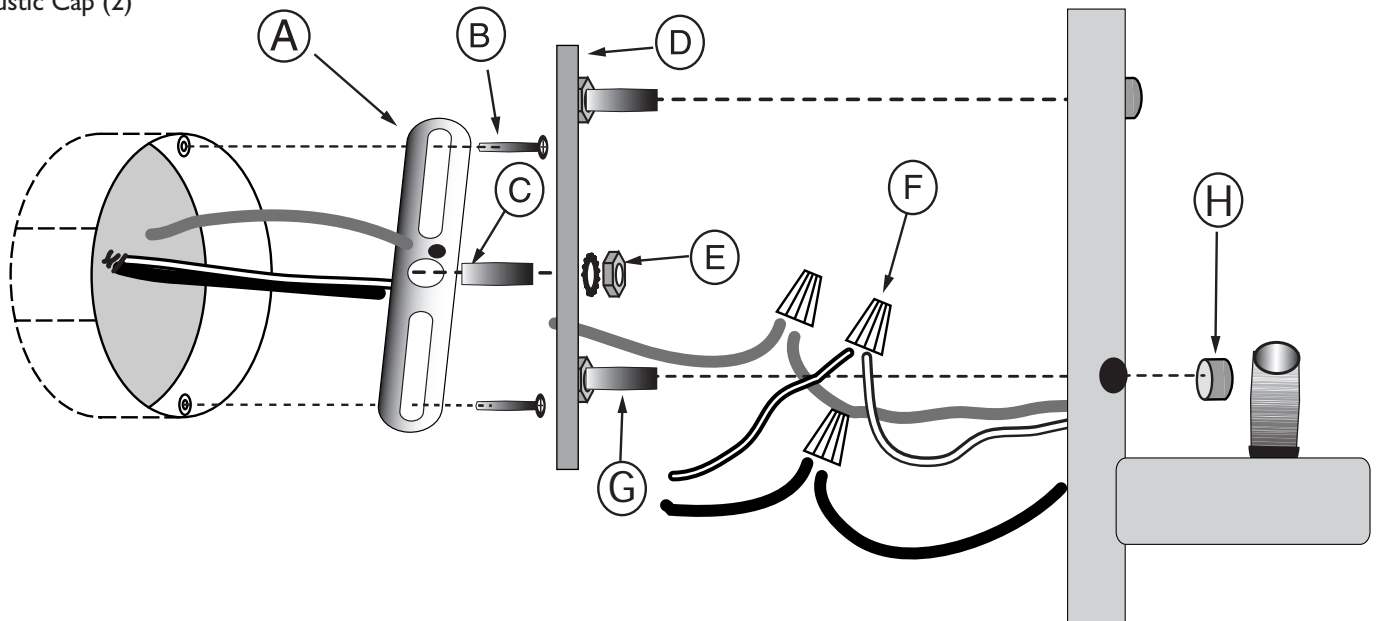

**GENERAL**

1. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
2. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.
3. These fixtures are intended to be mounted to a minimum 4" x 1-1/8" deep round outlet box. The box must be directly supported by the building structure.
4. **Before starting the installation, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.**

NOTE: The important safeguards and instructions appearing in these instructions are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors, which cannot be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.

**SECTION A - WIRING INSTRUCTIONS**

1. Pull power supply wires out of junction box.
2. Fasten cross bar (A) to junction box using 1" screws (B). Be sure cross bar is flush with wall.
3. Thread 1/2" long threaded pipe (C) into center of cross bar (A).
4. Pull supply wires through one of the big holes in fireplate (D). Secure fireplate (D) to cross bar (A) using hex nut and lock-washer (E).
5. Lift fixture up to junction box. Using wire connectors ( F ), connect the white supply wire to the white fixture wire and connect the black supply wire to the black fixture wire. Be sure no bare wires are exposed outside of wire connectors.
6. Use a wire connector ( F ) to connect the supply ground wire to the bare copper ground wire from fixture.
7. Thread the threaded pipes ( G ) into nuts on fireplate. Slip pipes ( G ) through holes in fixture backplate and secure using rustic caps ( H ).
8. Proceed to Section B for final fixture assembly.

#### PARTS LIST - SECTION B

- A. 5" H Glass (2)
- B. 6"H Glass (2)

#### SECTION B - GLASS INSTALLATION

1. For large round, follow the 5" – 6" – 6" – 5" pattern for glass placement.
2. Remove brass rings and set aside before installing glass.
3. Install glass (A & B) by sliding down socket with flat sides of socket aligned with flat side in bottom glass washer. Once glass is firmly seated on top band, twist bottom of glass clockwise 1/8" turn. This will secure the glass, no need to replace brass rings.
4. Once glass is installed, install light bulbs (not included).
5. Electricity may be restored to fixture.



#### FOR FUTURE REFERENCE

To replace 20 watt MR4 down light bulb follow these instructions

1. Turn off electricity to fixture!
2. While pressing up on outer edge of socket, use a small flat screwdriver to carefully remove glass shield covering bulb.
3. Work the glass shield around gradually until it can be pulled off by hand.
4. Pull the light bulb out and replace.
5. Carefully press the glass cover back into place.
6. Electricity may be restored to fixture.

LIMITED 2-YEAR WARRANTY: Avalanche Ranch Light Company warrants that its products are free of defects in workmanship and materials for a period of two years from date of purchase. If within two years from date of purchase any of its products are found defective in workmanship or materials, Avalanche Ranch Light Company will repair or replace, at its sole option, the defective product upon presentation of proof of purchase and the defective product.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Avalanche Ranch Light Company's liability under any warranty, whether express or implied, is LIMITED SOLELY TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT FOR THE DURATION OF THIS WARRANTY AND DOES NOT INCLUDE LABOR OR OTHER CONSEQUENTIAL OR INCIDENTAL DAMAGES.