

PO Box 31397

BELLINGHAM, WA 98228-3397

(T) 360-752-1610 • 888-841-1810

 
(F) 360-752-1612 • 888-841-1812

FIXTURE COMPONENTS:

- Fixture bowl with sockets and nozzles
- Top Assembly Disk

PARTS LIST - SECTION A

- A. 3/8" diameter pipe with threads at both ends (3)
- B. Hex Nut and Lockwasher (3 of each)

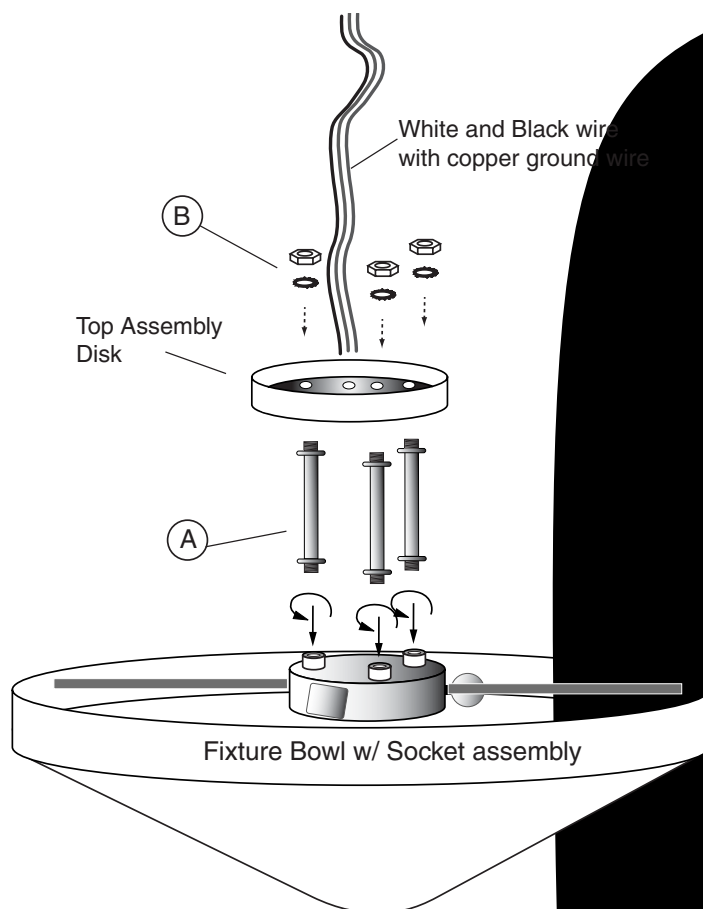

GENERAL

1. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
2. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.
3. These fixtures are intended to be mounted to a minimum 4" x 1-1/8" deep round outlet box. The box must be directly supported by the building structure.
4. **Before starting the installation, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.**

NOTE: The important safeguards and instructions appearing in these instructions are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors, which cannot be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.

SECTION A - ASSEMBLY INSTRUCTIONS

 
NOTE: Before hanging your new fixture, it must be assembled according to these instructions.

1. Insert one of the threaded ends of a 3/8" diameter pipe (A) into one of the nozzles of the fixture bowl w/ socket assembly. (NOTE: It will be necessary to feed the white and black wire through the pipe as you perform this step).
2. Insert the other two 3/8" diameter pipes into the nozzles.
3. Feed the white and black wires through one of the holes of the bottom of the Top Assembly Disk. (NOTE: The bottom of the Top Assembly Disk is the side with the wavy edge.)
4. Place the Top Assembly Disk on the three pipes and secure each pipe with a lockwasher and hex nut (B).
5. The fixture is now ready to be hung from a flat or valuted ceiling, so please proceed to section B.

CRESTLINE SEMI-FLUSH (3 CENTER PIPES)

PARTS LIST - SECTION B

- A. 5/8" Cap Nut (1)
- B. Top Assembly Disk (from Section A)
- C. 1½ Threaded pipe
- D. 1" or 1½" Screws (2)
- E. Straight Cross bar (1)
- F. Wire Connectors (2)
- G. Green Ground Screw (1)

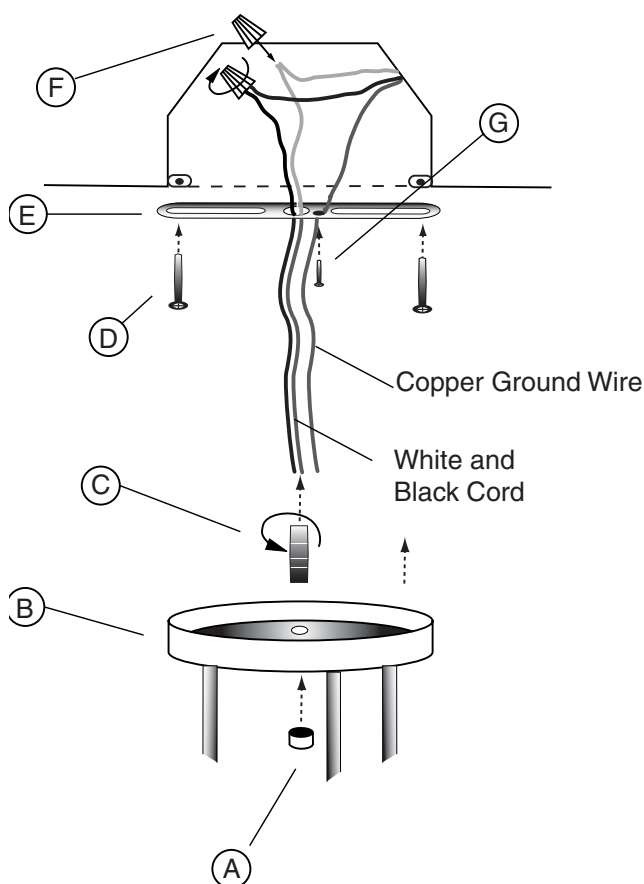

SECTION B- DIRECT MOUNT TO FLAT CEILING

NOTE: This section applies to installations where the fixture is to be directly mounted to a junction box and will be wired with white and black wire.

1. Thread the threaded pipe (C) into the straight cross bar (E). Make sure the green ground screw (G) points toward fixture.
2. Using the Wire Connectors (F), connect the white supply wire to the white fixture wire and connect the black supply wire to black fixture wire. Be sure no bare wires are exposed outside of wire connectors. Tuck extra wires back into the ceiling outlet box.
3. Wrap, in a clockwise direction, the green ground wire (from the ceiling box) and the bare copper ground wire (from the fixture) around the Green Ground Screw (G) on the cross bar. Tighten.
4. Place the straight cross bar (E) on the ceiling box and secure with the machine screws (D).
5. Raise the top assembly disk (B) up to the ceiling box with the center mounting hole aligned with threaded pipe protruding out of the cross bar.
6. Secure with 5/8" Cap Nut (A)
7. Now electricity can be restored to the fixture.

LIMITED 2-YEAR WARRANTY: Avalanche Ranch Light Company warrants that its products are free of defects in workmanship and materials for a period of two years from date of purchase. If within two years from date of purchase any of its products are found defective in workmanship or materials, Avalanche Ranch Light Company will repair or replace, at its sole option, the defective product upon presentation of proof of purchase and the defective product.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Avalanche Ranch Light Company's liability under any warranty, whether express or implied, is LIMITED SOLELY TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT FOR THE DURATION OF THIS WARRANTY AND DOES NOT INCLUDE LABOR OR OTHER CONSEQUENTIAL OR INCIDENTAL DAMAGES.