

Ce.
Lig.

PARTS LIST SECTION A

- A Cross Bar (1)
- B 1 1/2" Screws (2)
- C Green Ground Screw (1)
- D Wire Connectors
- E 1 1/2" Threaded Pipe
- F Cap Nut (1)
- G Glass (1)
- H Die Cast Ring (2)

DIAGRAM 2


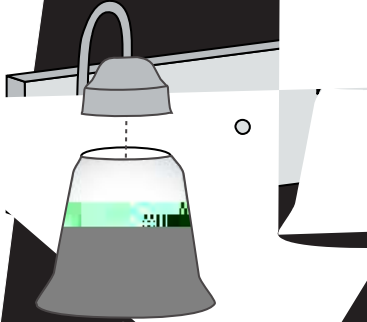


DIAGRAM 1

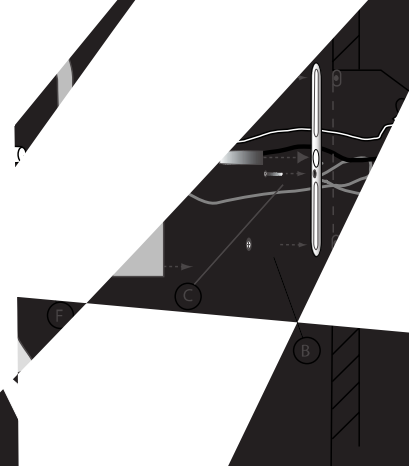

WIRING AND FINAL INSTALLATION

1. Follow Diagram 1, pull power wires to junction box.
2. Fasten cross bar (A) to junction box with screws. Be sure the cross bar is flush with the junction box.
3. Wire ground wire from junction box to green ground screw (C) in clockwise direction and then to the fixture.
4. Use wire connectors to connect the white supply wire to white fixture wire. Connect the black supply wire to black fixture wire. Be sure no bare wires are exposed.

Thread cap nut (F) and tighten.

Place back of fixture over mounting hole and center.

Insert threaded pipe into center hole of the fixture until secure.

Now diagram 2, install glass (G) and die cast rings (H) provided. Do not overtighten screws. Break. Use 100 Watt maximum bulbs (not provided).

Electricity may now be restored to the fixture.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES IN CONNECTION WITH THIS PRODUCT. WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Avalanche Ranch Light Company's liability is limited to the replacement of the defective part, whether express or implied. REPLACEMENT OF THE DEFECTIVE PART IS THE ONLY REMEDY AVAILABLE. THIS WARRANTY IS VOID IF THE PRODUCT IS NOT USED IN ACCORDANCE WITH THE INSTRUCTIONS PROVIDED.

Before installation, please read the instructions and diagrams thoroughly. Installation must be in accordance with local codes or the National Electrical Code. If you are unsure of installing electrical wiring, contact a qualified licensed electrician. The fixture is intended to be mounted to a minimum 2" diameter outlet box. The box must be drilled in accordance with building code requirements.

Before using the fixture, disconnect the power to the fixture by turning off the circuit breaker or by removing the fuse from the fuse box. Turning the power off using the light switch is not sufficient to disconnect the power.

Read the instructions and instructions apply to this product. These instructions are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are required factors, which cannot be built into any product. These instructions must be supplied by the person(s) caring for and installing the fixture.

2-YEAR WARRANTY
 are free of defects for 2 years from date of purchase. If the materials, Cedar Valley Light Company, or the defective part is replaced, the defective part is replaced.