



PO Box 31397
BELLINGHAM, WA 98228-3517
(T) 360-752-1610 • 888-841-1810
(F) 360-752-1612 • 888-841-1812

ASSEMBLY, WIRING & INSTALLATION INSTRUCTIONS

HW KIT # 94-H354

HALOGEN BATH - QUAD

PARTS LIST - SECTION A

- A. Formed fireplate
- B. Plastic anchor (6)
- C. 1" metal screws (6)

DIAGRAM 1


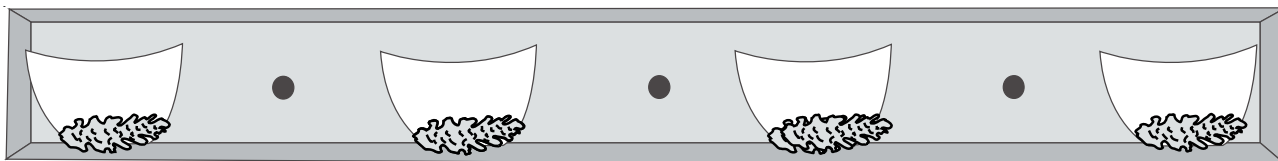 


DIAGRAM 2

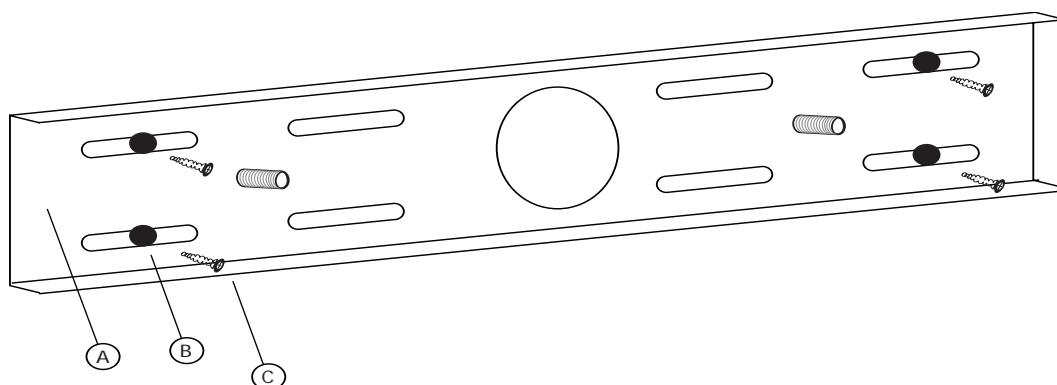 

GENERAL

1. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
2. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.
3. These fixtures are intended to be mounted to a minimum 4" x 1-1/8" deep round outlet box. The box must be directly supported by the building structure.
4. **Before starting the installation, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.**

NOTE: The important safeguards and instructions appearing in these instructions are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors, which cannot be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.

SECTION A - FIREPLATE INSTALLATION

1. Separate and remove the backplate in diagram 1 from the fireplate in diagram 2 of the bath fixture.
2. Hold the fireplate to the wall with the large center hole over the junction box and aligned to the mounting holes. Make sure the fireplate is level to the floor (Diagram 1) Mark wall through open slots on top and bottom and both sides of the fireplate.
3. Drill 3/16" holes in wall at marks.
4. Insert plastic anchors (B) into the holes.
5. Place fireplate flush to wall with open slots over plastic anchors. Insert metal screws (C) through fireplate and tighten into plastic anchors. Be sure fireplate is level to the floor and fireplate is secure.
6. Proceed to Section B.



PO Box 31397
BELLINGHAM, WA 98228-3517
(T) 360-752-1610 • 888-841-1810
(F) 360-752-1612 • 888-841-1812

ASSEMBLY, WIRING & INSTALLATION INSTRUCTIONS

HW KIT # 94-H354

HALOGEN BATH - QUAD



PO Box 31397
BELLINGHAM, WA 98228-3517
(T) 360-752-1610 • 888-841-1810
(F) 360-752-1612 • 888-841-1812

ASSEMBLY, WIRING & INSTALLATION INSTRUCTIONS


HW KIT # 94-H354

HALOGEN BATH - QUAD

PARTS LIST - SECTION C

- A. Halogen Bulb (4 not included)
[Single end halogen lamp, type JD E11, 100 Watt maximum,
75 Watt recommended]
- B. Glass (4)
- C. Fixture Bracket (4)

 
DIAGRAM 1

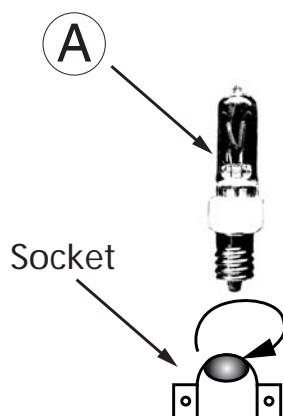

SECTION C - HALOGEN BULB AND GLASS

1. Following diagram 1, carefully install halogen bulb (C) without making direct contact between glass part of bulb and fingers. Press base of bulb firmly into socket and turn in a clockwise direction.
2. Gently fold wire mesh over the halogen bulb.
3. Following diagram 2, carefully slide the glass (B) into the bracket (C). Each piece of glass is labeled left, center and right to correspond with the brackets. The glass should sit flush with the backplate and not rock. If you are having trouble installing the glass **DO NOT FORCE** it, the glass may break. Carefully adjust the bracket manually until the glass is installed.
4. Electricity may now be restored.

 DIAGRAM 2

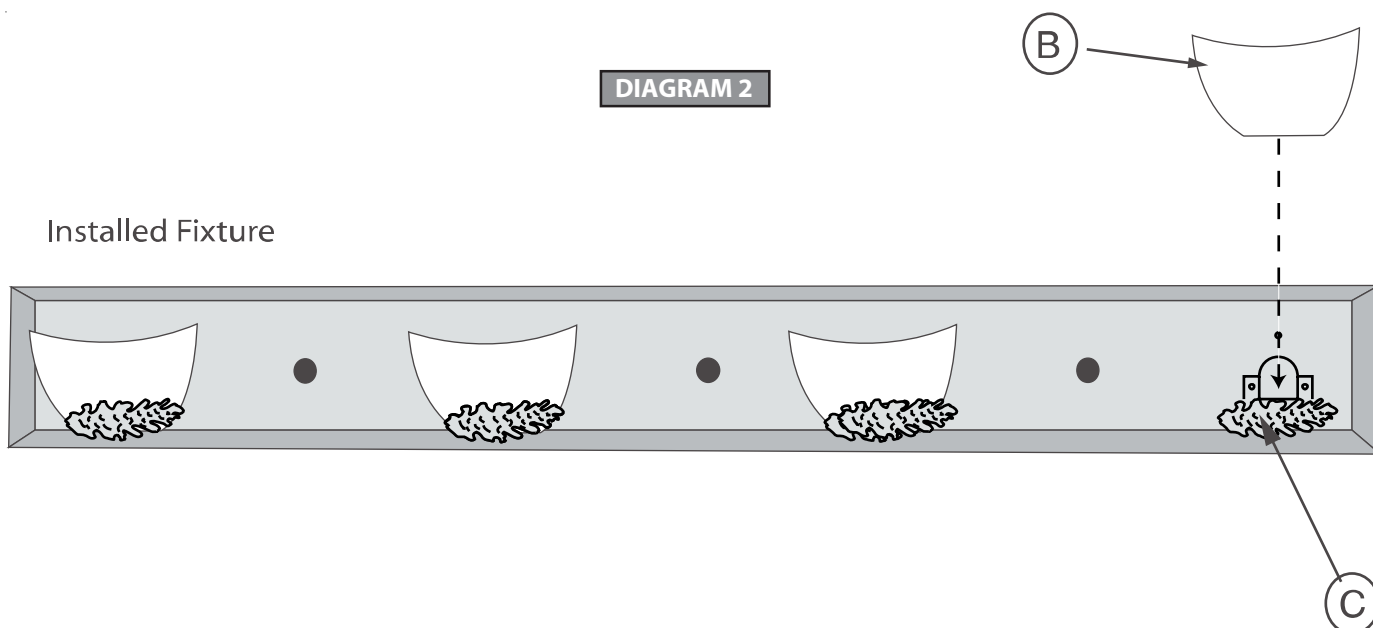

LIMITED 2-YEAR WARRANTY: Cedar Valley Lighting warrants that its products are free of defects in workmanship and materials for a period of two years from date of purchase. If within two years from date of purchase any of its products are found defective in workmanship or materials, Cedar Valley Lighting will repair or replace, at its sole option, the defective product upon presentation of proof of purchase and the defective product.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Cedar Valley Lighting's liability under any warranty, whether express or implied, is LIMITED SOLELY TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT FOR THE DURATION OF THIS WARRANTY AND DOES NOT INCLUDE LABOR OR OTHER CONSEQUENTIAL OR INCIDENTAL DAMAGES.