

PARTS LIST

- | | |
|---------------------------|---------------------------|
| A. 5/8" Cap Nut with hole | H. Lantern Roof |
| B. 1/2" Threaded Pipe | I. Lantern |
| C. Canopy | J. White Die Cast Ring |
| D. Round Cross Bar | K. Hex Nut and Lockwasher |
| E. Wire Connectors (2) | L. 1 1/2" Screws (2) |
| F. Green Ground Screw | M. Acorn Nuts (2) |
| G. 1" Screws (2) | |


CORD HUNG INSTALLATION

1. Determine the desired height of the pendant from the ceiling, add approximately 12" and cut any excess cord length.
2. Thread the flat side of the cap nut (A) onto the 1/2" threaded pipe (B) and tighten.
3. Feed the cord through each of the following parts in the order listed:
 - Cap nut (A) and threaded pipe (B) assembly (from Step 2) - cap toward fixture
 - Canopy (C) - angular open side towards ceiling
 - Hex nut and lockwasher (K)
 - Round cross bar (D) - green ground screw (F) toward the fixture.
4. Make a knot in the cord approximately 6" from the end for a strain relief.
5. Carefully remove about 4" of the outer jacket from the cord and strip about 3/4" off each of the leads (ridged, smooth and green wires).
6. Using the holes 1 3/8" from the center, thread the 1 1/2" machine screws (L) into the round cross bar (D) (make sure the green ground screw hole dimples point toward fixture) and tighten.
7. Using the wire connectors (E), connect the ridged supply wire to ridged fixture wire. Connect the smooth supply wire to the smooth fixture wire. Be sure no bare wires are exposed outside of the wire connectors.
8. Wrap, in a clockwise direction, both the green ground wire (from the fixture) and the ground wire from the junction box around the green ground screw (F) on the cross bar (D). Tighten.
9. Place the cross bar (D) on the ceiling box and secure with the 1" machine screws (G).
10. Raise the canopy (C) up to the ceiling box with the two mounting holes aligned with two 1 1/2" screws (L) protruding out of the cross bar (D).
11. Secure with acorn nuts (M).
12. Install the lantern (I) to the roof (H) by unscrewing the white die cast ring (J) from the socket. Place the lantern (I) on the socket and then screw the ring back on.
13. Now electricity can be restored to the fixture.

GENERAL

1. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
2. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.
3. These fixtures are intended to be mounted to a minimum 4" x 1-1/8" deep round outlet box. The box must be directly supported by the building structure.
4. **Before starting the installation, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. Turning the power on using the light switch is not sufficient to prevent electrical shock.**

NOTE: The important safeguards and instructions appearing in these instructions are not meant to cover all possible conditions and situations that may occur. It must be understood that

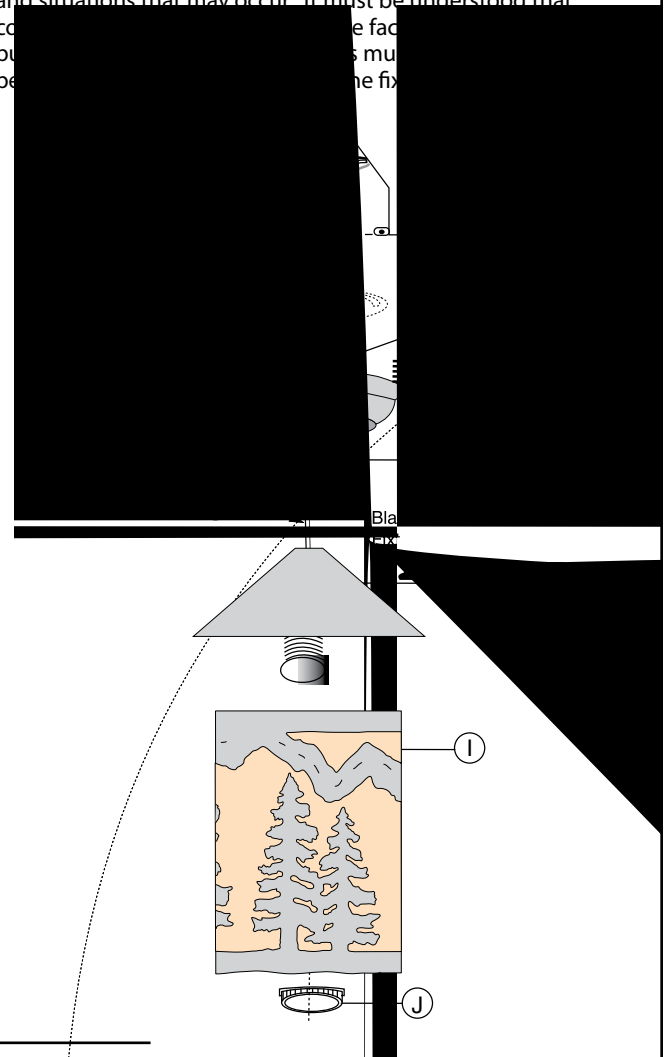

LIMITED 2-YEAR WARRANTY: Avalanche Ranch Light Company warrants that its products are free of defects in workmanship and materials for a period of two years from date of purchase. If within two years from date of purchase any of its products are found defective in workmanship or materials, Avalanche Ranch Light Company will repair or replace, at its sole option, the defective product upon presentation of proof of purchase and the defective product.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Avalanche Ranch Light Company's liability under any warranty, whether express or implied, is LIMITED SOLELY TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT FOR THE DURATION OF THIS WARRANTY AND DOES NOT INCLUDE LABOR OR OTHER CONSEQUENTIAL OR INCIDENTAL DAMAGES.