

### CRESTLINE 48" CHANDELIER SERIES

 
HW KIT # 94-A40710

#### FIXTURE COMPONENTS:

- Fixture bowl with sockets
- Top Assembly disk (1)

#### PARTS LIST - SECTION A

- A. 3/8" dia pipe with thread at one end (1)
- B. Hex Nut (1)
- C. Chain links (4)
- D. Side arms with holes at one end (4)
- E. Pine trees (on selected models only)
- F. Machine screws
- G. Center tree set
- H. Hanging chain (3' is standard)
- I. Small 4 leg chain set (1)
- J. Large 4 leg chain set (1)

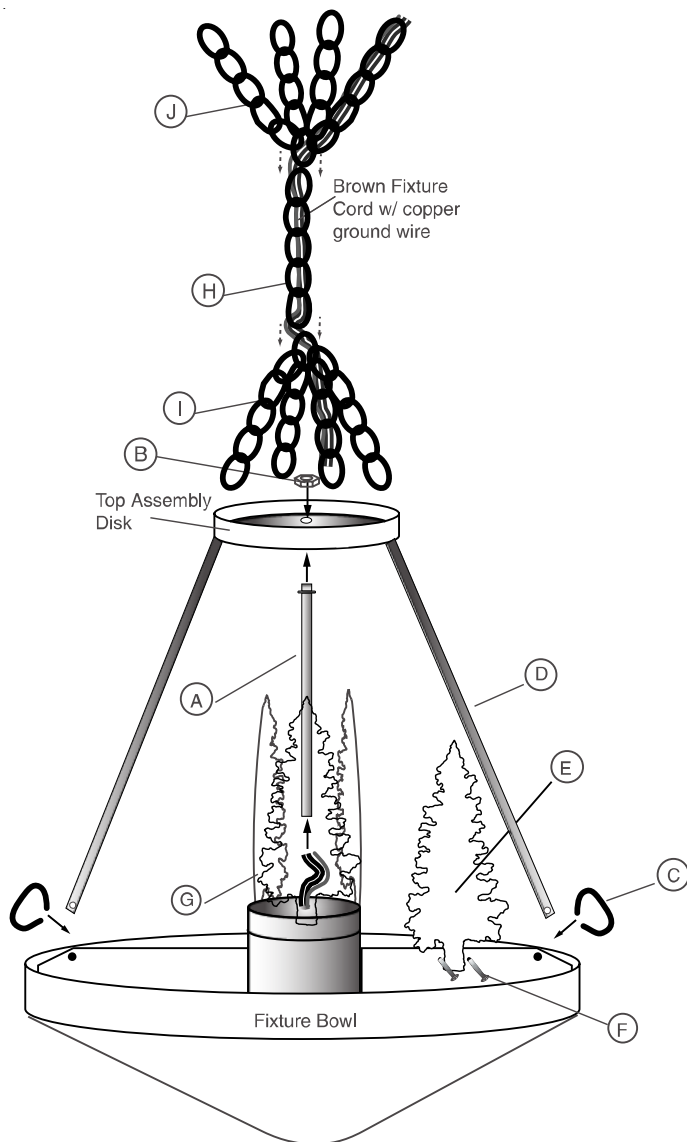

#### GENERAL

1. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
2. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.
3. These fixtures are intended to be mounted to a minimum 4" x 1-1/8" deep round outlet box. The box must be directly supported by the building structure.
4. **Before starting the installation, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.**

NOTE: The important safeguards and instructions appearing in these instructions are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors, which cannot be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.

#### SECTION A - ASSEMBLY INSTRUCTIONS

Before hanging your new Crestline Chandelier Light, the fixture must be assembled following these instructions.

1. Insert the 3/8" diameter pipe (A) into the center hole of the Top Assembly Disk and secure with the hex nut (B) on top. (NOTE: The bottom of the Top Assembly Disk is the side with the 1/4" holes as shown.) Tighten securely.
2. Feed all of the brown and copper wire up through the center tree set (G) lock washer and hex nut. Thread hex nut on to small threaded pipe to secure center tree set.
3. Feed all of the brown and copper wire up through the pipe and the assembly from Step 1 as shown.
4. Insert the side rods into the oblonged holes in top assembly disc. Insert 1 chain link (C) into each of the four side rods with holes (D) then attach the links to the holes provided. Close each link with a pair of pliers.
5. For fixtures with pine trees, there are four separate pine trees (E) to be attached to the center arms using the machine screws (F).
6. Feed the brown fixture wire and bare copper ground wire through one leg of the small 4 leg chain set (I).
7. Then attach each leg to the outer loop on the top assembly.
8. Feed the fixture wire through the large chain set (J), skipping every other link. Then attach to the junction of the small chain set (I).
9. The fixture is now ready for wiring to the ceiling junction box, proceed to Section B.

### CRESTLINE 48" CHANDELIER SERIES

 
HW KIT # 94-A40710

#### PARTS LIST - SECTION B

- A. Fire Plate for 48" Chandelier
- B. Ceiling Canopy
- C. Threaded Pipes (4)
- D. Lag Bolts (4)
- E. Rustic Caps (4)
- F. Lid
- G. Acorn Nuts (2)
- H. Orange Wire Connectors (3)

#### SECTION B - CHAIN HANGING INSTALLATION

1. Hold the fire plate (A) up to the ceiling so the center hole is over the junction box with the nuts away from the ceiling.
2. Align the lag bolts (D) up with the holes on the fire plate (A). Then drive the lag bolts into the rafters.
3. Thread the threaded pipes (C) into the nuts on the fire plate.
4. Align the holes in the ceiling canopy (B) with the threaded pipes (C) and secure the canopy to the fire plate (A) using the rustic caps (E).
5. Lift the fixture up to the canopy (B) and attach open chain links to the holes in the outer band. NOTE: Make sure the fixture wire is aligned with the hole in the canopy.
6. Feed the fixture wire through the small hole in the canopy.
7. Using the wire connectors (H) attach the black supply wire with the smooth fixture wire and the white supply wire with the grooved fixture wire.
8. Attach the supply ground wire with the fixture ground wire.
9. Hold the small lid (F) up to the center hole in the ceiling canopy (B). Secure using the acorn nuts (G) provided.
10. Electricity can be now restored to the fixture.

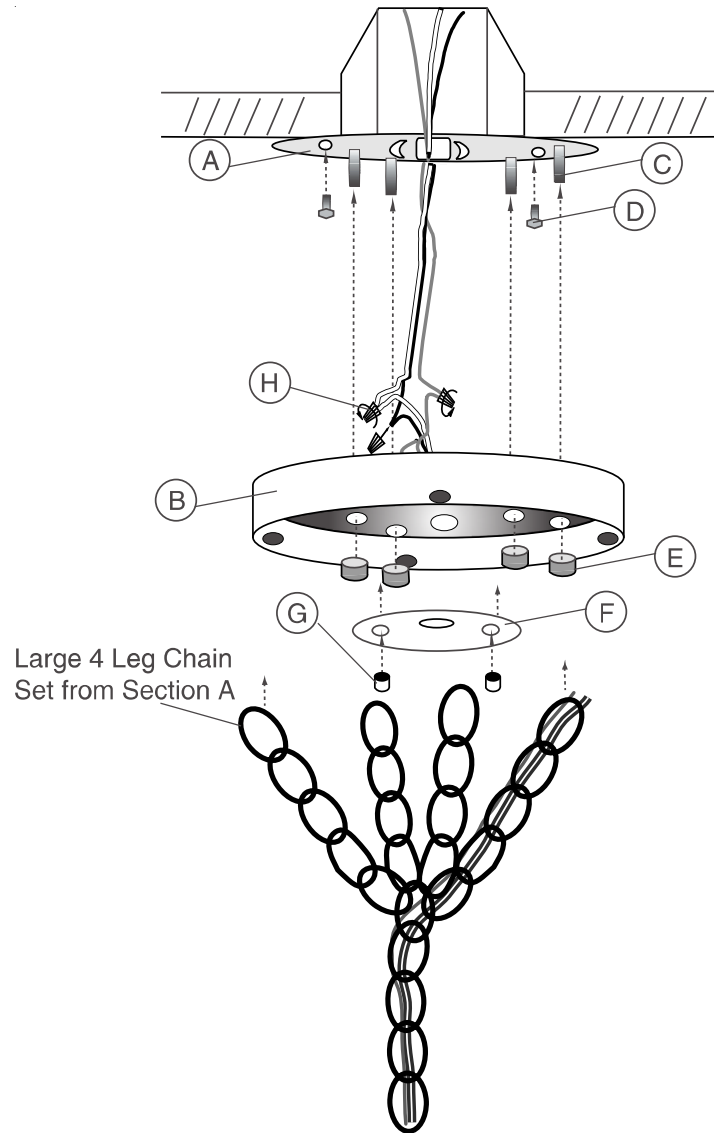

LIMITED 2-YEAR WARRANTY: Avalanche Ranch Light Company warrants that its products are free of defects in workmanship and materials for a period of two years from date of purchase. If within two years from date of purchase any of its products are found defective in workmanship or materials, Avalanche Ranch Light Company will repair or replace, at its sole option, the defective product upon presentation of proof of purchase and the defective product.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Avalanche Ranch Light Company's liability under any warranty, whether express or implied, is LIMITED SOLELY TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT FOR THE DURATION OF THIS WARRANTY AND DOES NOT INCLUDE LABOR OR OTHER CONSEQUENTIAL OR INCIDENTAL DAMAGES.