


VISTA EXTERIOR SERIES (WALL MOUNT ONLY)

PARTS LIST - SECTION A

- A. Lower Tree assembly
- B. Glass Cylinder
- C. Top Cone Assembly
- D. Bolt, washer and lock washer

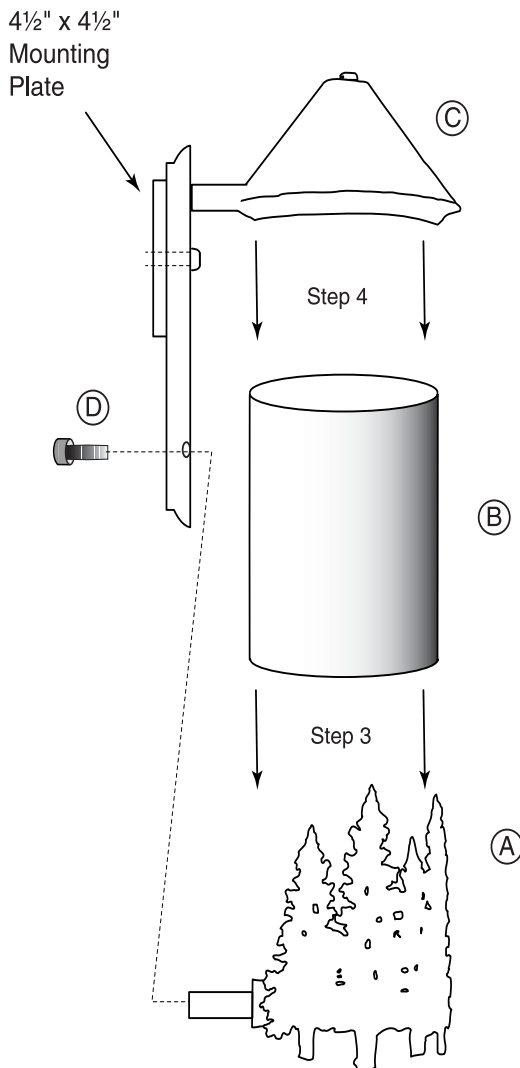

GENERAL

1. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
2. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.
3. These fixtures are intended to be mounted to a minimum 4" x 1-1/8" deep round outlet box. The box must be directly supported by the building structure.
4. **Before starting the installation, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.**

NOTE: The important safeguards and instructions appearing in these instructions are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors, which cannot be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.

SECTION A - ASSEMBLY INSTRUCTIONS


NOTE: Before hanging your new fixture, it must be assembled according to these instructions.

1. Carefully unwrap all components.
2. Remove the bolt and washers (D) from the lower tree assembly (A) and place on a clean, flat surface.
3. Carefully place the glass cylinder (B) inside the ring of the lower tree assembly.
4. Lower the top cone assembly (C) onto the glass cylinder.
5. Thread the bolt and washer (D) through the lower hole of the fixture and into the square tube of the lower tree assembly. Adjust so that the top assembly no longer rests on top of the glass when this lower bolt is tightened. Securely tighten the bolt.
6. Mount to wall following the instructions on the reverse side of this sheet.

VISTA EXTERIOR SERIES (WALL MOUNT ONLY)

PARTS LIST

- A. Cross bar
- B. 1" or 1½" Screws (2)
- C. Green Ground Screw
- D. Wire Connectors (2)
- E. Threaded Pipe
- F. Rustic Cap Nut

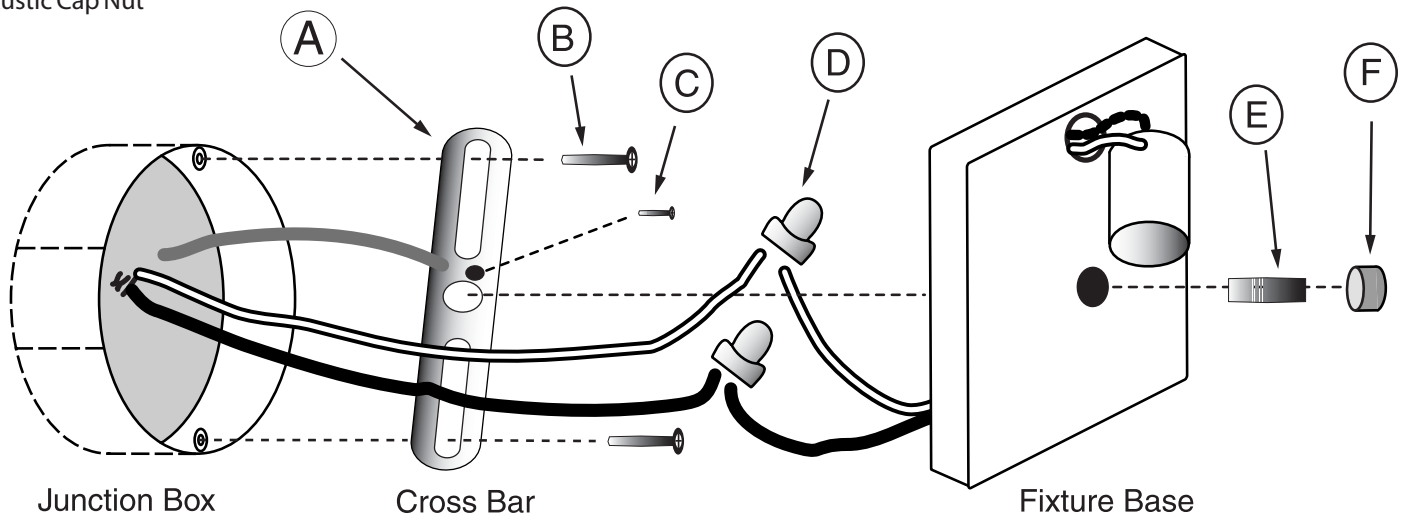

WIRING & INSTALLATION

1. Pull power supply wires out of junction box.
2. Fasten Cross Bar (A) to junction box using 1" or 1½" screws (B). Be sure cross bar is flush with wall .
3. Wrap green ground wire from junction box around Green Ground Screw (C) in clockwise direction and thread into cross bar.
4. Using the Wire Connectors (D), connect the white supply wire to the white fixture wire and connect the black supply wire to black fixture wire. Be sure no bare wires are exposed outside of wire connectors.
5. Thread the Threaded Pipe (E) into the Rustic Cap Nut (F) and tighten.
6. Place back of fixture over junction box with the center mounting hole aligned with the center of the cross bar. The socket must point down. Insert Threaded Pipe/Cap nut assembly through the center hole of the fixture and thread into cross bar until secure.
7. This fixture must be sealed to the mounting surface with an exterior silicone caulk (or equivalent) around the top and both sides when installed.
9. Screw bulb (not included) into fixture socket. Turn on power to the junction box.

LIMITED 2-YEAR WARRANTY: Avalanche Ranch Light Company warrants that its products are free of defects in workmanship and materials for a period of two years from date of purchase. If within two years from date of purchase any of its products are found defective in workmanship or materials, Avalanche Ranch Light Company will repair or replace, at its sole option, the defective product upon presentation of proof of purchase and the defective product.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Avalanche Ranch Light Company's liability under any warranty, whether express or implied, is LIMITED SOLELY TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT FOR THE DURATION OF THIS WARRANTY AND DOES NOT INCLUDE LABOR OR OTHER CONSEQUENTIAL OR INCIDENTAL DAMAGES.