

PO Box 31397 Bellingham, WA 98228-3397 (t) 360-752-1610 (f) 360-752-1612

HW KIT # 94-A411

HR RIDGEMONT & CRESTLINE CHANDELIERS WITHOUT CENTER TREES INSTALLATION INSTRUCTIONS

GENERAL

- 1. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
- 2. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.
- These fixtures are intended to be mounted to a minimum 4" x 1-1/8" deep round outlet box. The box must be directly supported by the building structure.
- 4. Before starting the installation, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.

NOTE: The important safeguards and instructions appearing in these instructions are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors, which cannot be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.

SECTION A - ASSEMBLY INSTRUCTIONS

NOTE: Before hanging your new fixture, it must be assembled according to these instructions.


- 1. Attach the 3/8" HR curved pipes (A) to the fixture band using the nuts provided. (See Drawing)
- 2. Place the Top Assembly Disk onto the tci2²⁰vi Ilahanashe(y thehel
- 3.



PO Box 31397 Bellingham, WA 98228-3397 (t) 360-752-1610 (f) 360-752-1612

HW KIT # 94-A411

HR RIDGEMONT & CRESTLINE CHANDELIERS WITHOUT CENTER TREES INSTALLATION INSTRUCTIONS

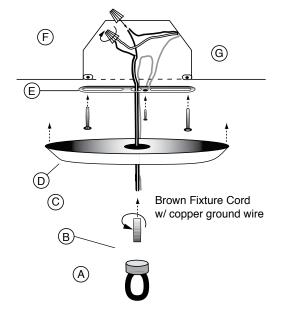



PO Box 31397 Bellingham, WA 98228-3397 (t) 360-752-1610 (f) 360-752-1612

HW KIT # 94-A411

HR RIDGEMONT & CRESTLINE CHANDELIERS WITHOUT CENTER TREES INSTALLATION INSTRUCTIONS

