



PO BOX 31397
BELLINGHAM, WA 98228-3517
(T) 360-752-1610 • 888-841-1810
(F) 360-752-1612 • 888-841-1812

ASSEMBLY, WIRING & INSTALLATION INSTRUCTIONS

HW KIT # 94-H353

HALOGEN BATH - TRIPLE

PARTS LIST - SECTION A

- A. Formed fireplate
- B. Plastic anchor (4)
- C. 1" metal screws (4)

DIAGRAM 1


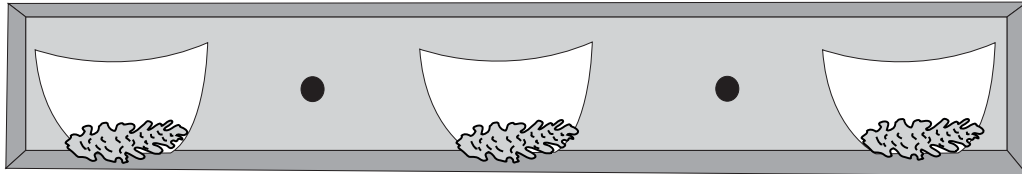


DIAGRAM 2

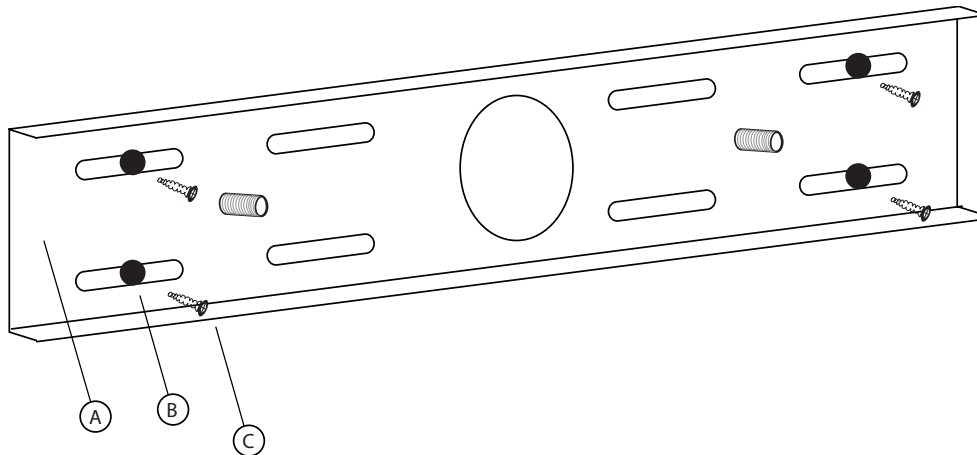

GENERAL

1. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
2. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.
3. These fixtures are intended to be mounted to a minimum 4" x 1-1/8" deep round outlet box. The box must be directly supported by the building structure.
4. **Before starting the installation, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.**


NOTE: The important safeguards and instructions appearing in these instructions are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors, which cannot be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.

SECTION A - FIREPLATE INSTALLATION

1. Separate and remove the backplate in diagram 1 from the fireplate in diagram 2 of the bath fixture.
2. Hold the fireplate to the wall with the large center hole over the junction box and aligned to the mounting holes. Make sure the fireplate is level to the floor (Diagram 1) Mark wall through open slots on top and bottom and both sides of the fireplate.
3. Drill 3/16" holes in wall at marks.
4. Insert plastic anchors (B) into the holes.
5. Place fireplate flush to wall with open slots over plastic anchors. Insert metal screws (C) through fireplate and tighten into plastic anchors. Be sure fireplate is level to the floor and fireplate is secure.
6. Proceed to Section B.

**ASSEMBLY, WIRING & INSTALLATION
INSTRUCTIONS**

HW KIT # 94-H353



PO Box 31397
BELLINGHAM, WA 98228-3517
(T) 360-752-1610 • 888-841-1810
(F) 360-752-1612 • 888-841-1812

HALOGEN BATH - TRIPLE



PO Box 31397
BELLINGHAM, WA 98228-3517
(T) 360-752-1610 • 888-841-1810
(F) 360-752-1612 • 888-841-1812

ASSEMBLY, WIRING & INSTALLATION INSTRUCTIONS

HW KIT # 94-H353

HALOGEN BATH - TRIPLE

