

CRESTLINE CHANDELIER SERIES - 24", 28", & 36"
 3 SIDE RODS

FIXTURE COMPONENTS:

- Fixture bowl with sockets
- Top Assembly disk (1)

PARTS LIST - SECTION A

- A. 3/8" dia pipe with thread at one end (1)
 24": 14" long
 28": 19" long
 36": 21" long
- B. 1" Female loop (1)
- C. Chain links (3)
- D. Side arms with holes at one end (3)
 24": 19 1/4" long
 28": 23 3/4" long
 36": 25" long
- E. Pine trees (on selected models only)
 24": 9" Tall
 28": 11" Tall
 36": 13 3/4" Tall
- F. 1" Bracket with 2 holes and machine screws
- G. Center tree set
- H. Hanging chain (3' is standard)

GENERAL


1. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
2. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.
3. These fixtures are intended to be mounted to a minimum 4" x 1-1/8" deep round outlet box. The box must be directly supported by the building structure.
4. **Before starting the installation, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.**

NOTE: The important safeguards and instructions appearing in these instructions are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors, which cannot be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.

SECTION A - ASSEMBLY INSTRUCTIONS

NOTE: Before hanging your new Crestline Chandelier Light, the fixture must be assembled following these instructions.

1. Insert the 3/8" diameter pipe (A) into the center hole of the Top Assembly Disk (the top of the top assembly disk is the shallow side) and secure with the 1" female loop (B) on top. Tighten securely.
2. Feed all of the brown and copper wire up through the center tree set (G), lock washer and hex nut. Thread hex nut on to small threaded pipe to secure center tree set.
3. Feed all of the brown and copper wire up through the 3/8" diameter pipe (A) and the top assembly disk from Step 1 as shown.
4. Insert the side rods into the oblonged holes in top assembly disc. Insert 1 chain link (C) into each of the 3 side rods with holes (D). Then attach the links to the holes provided and close each link with a pair of pliers.
5. For fixtures with pine trees, there are three (3) separate pine trees (E) to be attached to the center arms using the 1" bracket and screws (F).
6. The fixture is now ready for wiring to the ceiling junction box, proceed to Section B.

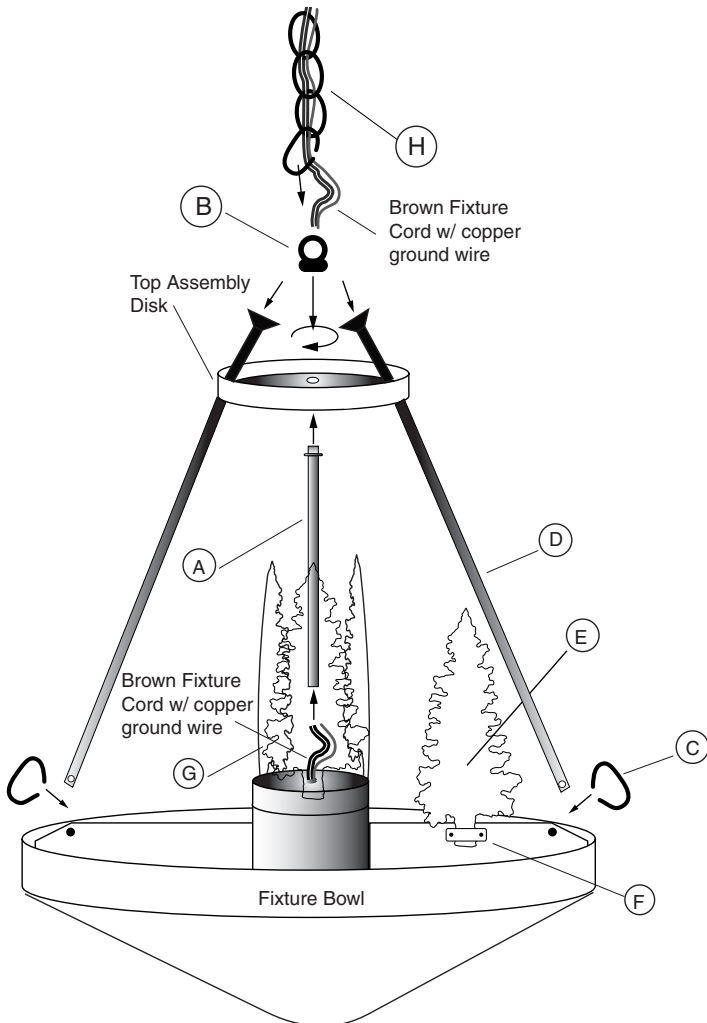


CRESTLINE CHANDELIER SERIES - 24", 28", & 36" 3 SIDE RODS

PARTS LIST - SECTION B

- A. Screw Collar Loop (1)
- B. Large Washer Nut for Screw Collar Loop (1)
- C. Threaded Pipe (1)
- D. Canopy (1)
- E. Cross bar (1)
- F. Wire Connectors (2)
- G. Green Ground Screw (1)
- H. Machine Screws (2)

-- 3' matching chain

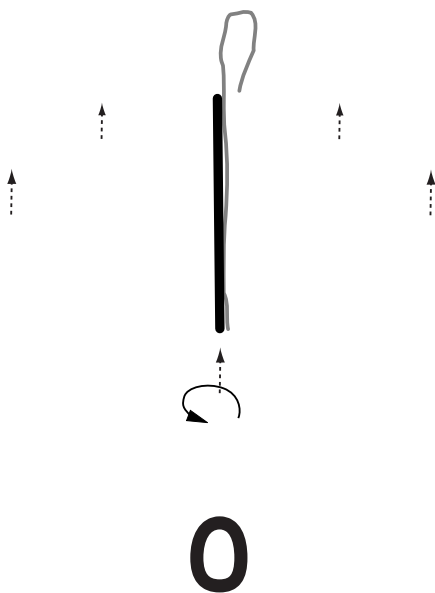

SECTION B - CHAIN HANGING INSTALLATION

NOTE: This section applies to installation where the fixture is hung from a chain, including vaulted ceilings.

1. Determine the desired height of the fixture from the ceiling, remove or add chain links to adjust for this height. Open chain links at the top and bottom of the chain to attach to 1" Female Loop from the Top Assembly Disk in Section A. **USE LOOP TO SUPPORT CHAIN, NOT ELECTRICAL CORD.**
2. Feed the brown cord and copper ground wire through chain, skipping every other link.
3. Unscrew the Large Washer Nut (B) from the Screw Collar Loop (A). Feed brown wire and ground wire through the large washer nut (B), screw collar loop and rustic canopy, and rounded side toward fixture in this order. Move down chain toward fixture.
4. Thread the Threaded Pipe (C) into the straight Cross bar (E) at the other end with the green ground screw (G) toward fixture. Place the Cross bar on the ceiling box and secure with machine screws (H).
5. Attach Screw Collar Loop (A) to Threaded Pipe (C). Lift the fixture up to the ceiling outlet box and attach chain to loop. Close last loop with a pair of pliers.
6. Feed cord and wire up through the loop and threaded pipe.
7. Pull out the power supply wire out of the ceiling outlet box. Using the Wire Connectors (F), connect the white supply wire to the ridged fixture wire and connect the black supply wire to round fixture wire. Be sure no bare wires are exposed outside of wire connectors. Tuck extra wires back into the ceiling outlet box.
8. Wrap, in a clockwise direction, the green ground wire from the ceiling box and the copper ground wire from the fixture around the Green Ground Screw (G) on the Cross bar (E). Tighten securely.
9. Raise the Canopy (D) up to the ceiling box with the center mounting hole aligned with the center of the screw collar loop (A).
10. Raise the Large Washer Nut (B) up to the screw collar loop (A) and canopy (D). Tighten until canopy is secure against the ceiling. (Note: It may be necessary to shorten the Threaded Pipe by threading it further into the cross bar).
11. Electricity can be now restored to the fixture.

LIMITED 2-YEAR WARRANTY: Avalanche Ranch Light Company warrants that its products are free of defects in workmanship and materials for a period of two years from date of purchase. If within two years from date of purchase any of its products are found defective in workmanship or materials, Avalanche Ranch Light Company will repair or replace, at its sole option, the defective product upon presentation of proof of purchase and the defective product.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Avalanche Ranch Light Company's liability under any warranty, whether express or implied, is LIMITED SOLELY TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT FOR THE DURATION OF THIS WARRANTY AND DOES NOT INCLUDE LABOR OR OTHER CONSEQUENTIAL OR INCIDENTAL DAMAGES.